
# PROTECT YOUR

The vast majority of costly mechanical and electrical failures occur **AFTER** the factory warranty has expired. Avoid expensive repairs by protecting your vehicle with a Mechanical Breakdown Protection contract!

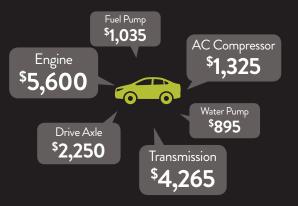

The above is for illustration purposes only.

Based on average repair and replacement costs. Actual costs paid may vary.

## ASG MAKES IT EASY FOR YOU!

- Repairs can be performed at any licensed repair facility in the US or Canada
- All claims are handled directly by the insurer with direct payments to the repair facility. We are not a third party administrator
- You may transfer your coverage if you sell your vehicle before your contract expires

## Claims: 800-331-3780 Administration: 800-572-9171



# MECHANICAL BREAKDOWN PROTECTION

# WHAT ARE MY OPTIONS?

With a full complement of affordable coverage options, ASG's protection is the ideal solution to protect your investment and reduce out-of-pocket expenses should a mechanical breakdown occur.

GOLD

SILVER



## EXTEND THE LIFE OF YOUR VEHICLE WITH **MECHANICAL BREAKDOWN PROTECTION**

## **PROTECTION FROM** THE UNEXPECTED

Your vehicle is not only an investment; it's your transportation lifeline. With ASG's protection plan, you have the peace of mind knowing your investment is protected.

## **GET THE MOST OUT OF YOUR COVERAGE**

With four levels of coverage, ASG's protection offers affordable options to ensure your vehicle is protected against costly mechanical and electrical repairs.



## **COVERAGE BENEFITS**

#### **Roadside Assistance**

All of our plans provide reimbursement for Roadside Assistance.

- The emergency services include:
- Lock-Out Assistance
- Fuel Delivery Services
- Flat Tire Assistance
- Battery Service

### **Rental Vehicle Assistance**

In the event of a covered mechanical breakdown. you will be eligible for alternate transportation expenses according to the schedule in your contract.

## **Tire Road Hazard**

ASG's protection plans provide coverage for the repair, or if necessary, the replacement of your vehicle's tires if damaged due to a road hazard.

### **Trip Interruption**

In case of a mechanical breakdown that occurs more than 100-miles away from your home and results in a repair facility keeping your vehicle overnight, you are eligible to be reimbursed for meals and lodging for up to three days.

\* This brochure highlights the benefits of ASG's protection plans. Please refer to the actual service contract for coverages, exclusions, terms and conditions

## **PERSONALIZE** YOUR COVERAGE

PLATINUM Protection includes all components listed in Gold, Silver and Copper, extended coverage for virtually all of your vehicle's mechanical and electrical components

**GOLD Protection** includes all components listed in Silver and Copper, plus the following:

- **SUSPENSION:** Radius arm and bushing · Stabilizer bar, links and bushings · Strut bearings and bushings · Air suspension compressor · Suspension control computer · Suspension control solenoids · Height
- sensor · Mode selector switch ELECTRICAL: Electronic fuel injection: sensors, 1 control units · Electronic spark timing control unit Igniter · Power antenna motor · Rear window: defogger unit, defrost grid · Electric power seat motor · Electric convertible top motor · Electric sunroof motor · Electric headlamp motor · Electronic instrument panel: control module, display · Engine wiring harness · Electronic traction control sensors and control module Electronic suspension air compressor · Factory installed theft alarm system · Factory installed remote keyless entry transmitter/receiver · Inclinometer · Illuminated vanity mirrors · Trip/mileage computer.

FUEL SYSTEM: Fuel injection pump · Diesel fuel injectors · Gasoline fuel injectors (for electrical failure only) · Vacuum pump.

- AIR CONDITIONING: Pressure switches Automatic temperature control selector head · Air ducts · Air registers · Control cables · Power module · Plenum doors · Vacuum motors · Heater core.
- AUDIO CENTER: Factory installed entertainment chassis modules including: Radio · CD player · Magnetic tape player · Graphic equalizer (Limited repair only, not replacement).
- HARDWARE: Ashtrays · Door: latches, locks, hinges Hood: latch release mechanism, struts, hinges, torsion bars · Ignition switch lock cylinder · Rear hatch struts Seat tracks · Deck lid: latch/release, hinges, torsion bars Power seat transmission · Window: crank handles, regulators · Wiper motor transmission · Altimeter Compass · Glove box: lock, latch,
- SILVER Protection includes all components listed in Copper, plus the following:
- ENGINE: Engine oil pressure gauge · Radiator coolant recovery unit · Electric radiator fan motor relay/switch · Electric radiator fan motor sensor · Engine coolant temperature gauge · Timing belt.

**ENGINE:** Exhaust manifold · Radiator · Electric fan

motor · Water pump housing · Belt tensioner · Engine

Electronic shift control: processor, sensor · Four wheel

TRANSMISSION AND TRANSFER CASE:

STEERING: Dampener · Tie rods · Tie rod ends

Steering wheel · Tilt wheel mechanism · Rear wheel

steering: control valve and sensor, control unit, shaft

and couplings, power cylinder(s), oil pump, stepper

BRAKE: Combination valve · Accumulator

ABS: booster pump, control processor, control

sensors, control solenoids, modulator valve, valve

and accumulator · Brake calipers · Wheel cylinders.

thermostat · Hot water valve

DRIVE AXLE: Differential Cover

drive actuator.

motor, rack assembly.

-3

0

- STEERING: Gear housing/rack assembly and their internal components · Control valve and cylinder · Power cylinder assembly · Steering column shaft(s) and their couplings/bearings · Steering knuckle · Power steering pump, pulley, and mounting brackets Pitman arm · Idler arm · Drag link · Steering column bearings
- BRAKE: Parking brake cable · Self adjusters · Brake lines & fittings.

### **COPPER** Protection

ENGINE: Cylinder block · Cylinder head(s) Turbocharger/supercharger and their internal components · Timing gears: Timing/balance shaft chain, guides, tensioners, sprockets and cover (excluding timing belt) · Oil pan · Oil pump · Valve cover(s) · Wastegate · Radiator fan motor ·Water pump and pulley · Fan clutch · Fan shroud.

- TRANSMISSION AND TRANSFER CASE: Transmission and transaxle cases and their internal components · Torque converter · Vacuum modulator
- Gear shift lever · Transmission shift linkage · Pan Transfer case and its internal components.
- **DRIVE AXLE:** Final drive and axle housings and their internal components · Axles · Axle shafts Propeller shafts · Constant velocity joints · Universal ioints · Yokes

ioints · Strut bar · Spindle and support.

module. distributor ·Throttle position sensor · Fuel

control temperature sensor · Idle control actuator ·

Manifold vacuum sensor · Crankshaft position sensor

Wiper motors · Manually operated electrical switches

Horn and horn relay · Electric window motors · Electric

Camshaft position sensor · Igniter · Volt/amp gauge

BRAKE: Master Cylinder · Power brake assist boosters Backing plate assembly · Brake pedal assembly Parking brake pedal · Parking brake release mechanism.

\*COVERAGES AND EXCLUSIONS – Seals and gaskets are included for covered components. For Copper plan, seals and gaskets are covered only in conjunction with a covered repair. Fluids and filters are included in conjunction with a covered repair. Examples of parts not covered are: Non-Mechanical, Non-Electrical, Non-Phenamici Cr Non-Hydraulic Components; Audio speakers; Batteries; Water and Wind/Air Leaks; Bumpers; Cables; Chassis; Clamps; Fasteners; Pasteners; Daster, Starteners; Water and Wind/Air Leaks; Bumpers; Cables; Chassis; Clamps; Fasteners; Passenger/Driver Restraint Systems; Seat Components; Audio Speakers; Batteries; Water and Wind/Air Leaks; Bumpers; Cables; Chassis; Clamps; Fasteners; Passenger/Driver Restraint Systems; Seat Components; Sugension Spring; Telephones; Torsion Bars; Wheels; Internet Computer; Telematic Services and Devices (ILE, Orsto); Navgation Systems; Vide Components; Heads-UD Display; Night Vision Systems; Tre Pressure Monitoring Systems; Angustens; Angusteners; Clamps; Charact; Cavers, Normal Maintenance And Service Items; Alignments; Adjustments; Calibrations; Software Updates; Cleaning; Rom-Publiched Diagnostic Labor; Tues; LightSWIBUS/Lenses Assemblies; Wart Items; Caessory Drive Balt; Starke Pads/Shoee/DrumRots; Storks; Struts; And Wiper Blades. We may use replacement components of a like kind and quality that may be rebuilt, remanufactured, or used. Refer to the contract for the conditions of coverage, exclusions and your duties during the term of the contract.

**SUSPENSION:** Wheel bearings · Sway bar and its switch · Door operated courtesy light switches bushings and linkage  $\cdot$  Upper and lower control arms  $\cdot$ Neutral safety switch · Windshield washer pump Control arm shafts and bushings · Upper and lower ball Cigarette lighter(s) · Auxiliary power point · Tachometer Headlamp dimmer switch · Map lights · Clock. **ELECTRICAL:** Ignition coil · Electronic ignition:

FUEL SYSTEM: Fuel tank · Fuel pump · Accelerator pedal ·Fuel pressure regulator · Fuel level sending unit Accelerator pedal linkage · Fuel pressure sensor · Fuel pump relay · Fuel shutoff control · Fuel tank filler pipe Metal fuel lines · Fuel gauge.

- AIR CONDITIONING: Idler pulley and bearing Manual temperature control selector head · Heater control valve · Idler pulley tensioner
- mirror motors · Cruise control: module, actuator Electric door lock: relay, actuator · Electric trunk/tailgate/ hatchback actuators · Backup light switch · Brake light

  - **ELECTRICAL:** Starter motor · Starter motor drive Starter motor solenoid · Alternator · Voltage regulator Alternator pulley and mounting bracket.
  - AIR CONDITIONING: Compressor · Accumulator/ <u> (</u> Drier only in conjunction with compressor replacement Condenser · Evaporator · Compressor clutch and coil Compressor pulley and mounting brackets · Expansion valve · Orifice tube · Blower motor.

